FORM NO. FW1164 **"98" SERIES JET PUMP MOTOR SERVICE PARTS** 0412 SUPERSEDES (For Pricing Refer To Repair Parts Price List) 0611 Rear Bearing Capacitor Rear Bracket 0 0 ⊕ Overload Front Bracket Switch Access Cover IL0563 Governor IL0564 Parts List for 98 Series SINGLE PHASE UNI-SINGLE PHASE THREE PHASE Motors FRAME 1-1/2 1-1/2 1-1/2 1/3 3/4 3/4 1/3 1/2 3/4 1/2 3/4 1/3 1/2 1/2 3/4 1/2 ΗP \sim c 2 ო SHAFT FLATTED 98F103 98F105 98F115 98F310 98F107 98F110 98F307 വ 98F320 98F120 98F305 98F31 THREADED 98U103 98U105 98J503 98H105 98H115 98J305 98J310 98U110 98L105 98L107 98J103 98J115 98J630 98J315 98J330 98U107 98J107 98J110 98J120 98H107 98H110 98J320 SHAFT 98J105 98J307 Description Part No. Switch & Governor † .567 022546 Switch & Terminal Board 137122A • • . • • • • • . • • • • • . Governor Kit 022545 • • • • • • • • • • • • • . • • . Governor Only .567 022543 • • • . . . • . 25 MFD 136656 Capacitor . 200 MFD 135884 • . . 282 MFD 135885 • • • • 324 MFD 135886 . • • • • **Overload Protector** 136123 . 136124 023519 • 022988 • 136127 . • . 136128 . . 136129 • . . 023369 Bearing & Housing 135309 • . . • • . Bearing, Front 023076 . . Bearing, Front 022962 . ٠ . . Bearing, Rear 022962 • • • • • • . • • • • • Combination Bracket, Front 135314 • . ٠ . 136115 . . Bracket, Front 134390 . . . • . . . Bracket, Front 023078 • • • • • • • • • • Bracket, Rear 136115 • . • . . • • • • • Thru Bolts (4) 5-3/4' 136116 • • . . 6″ 136117 • . . 6-1/2" 134512 . . . 7″ 134513 • • 7-5/8" 136118 • 8-1/8" 134515 . Access Cover, Rear* 021301R* Access Cover, Screws (2) 021302

NOTE: Capacitor Cover 132539 is utilized on 3 HP single phase motors.

(†) To replace both the switch and governor, use switch & governor kit 022546. This kit applies to all 98 series motors regardless of date code. Kit 022546 contains governor, switch & terminal board, snap ring and spring washer

(††) Governor Kit 022545 contains dovernor. snap-rind and sprind washer